



BaByliss®

ELECTRIC RAZOR

Operating Instructions
MODEL BFXRZ1

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING *KEEP AWAY FROM WATER*

DANGER — Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Except when charging, always unplug charger, charging cable, and charging stand from electrical outlet immediately after using.**
2. Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
3. Do not use appliance while bathing or in the shower.
4. Do not reach for an appliance that has fallen into water. Unplug immediately from outlet.
5. Unplug charger or charging cable before cleaning.

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. **Never leave a plugged-in appliance unattended, except when charging.**
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Keep the appliance dry.

4. Use appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer. Plug charger or charging cable directly into outlet – do not use an extension cord.
5. **Never operate the appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has fallen into water. Return the appliance to a BaBylissPRO® Service Center for examination and repair.**
6. Keep the charging cable away from heated surfaces.
7. Do not pull, twist, or wrap the charging cable around the unit.
8. Never drop or insert any object into any opening on the appliance.
9. Do not place the trimmer on any surface while it is operating.
10. Do not use the trimmer with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.
11. Do not use the appliance outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
12. Do not crush, heat above 212°F (100°C), or incinerate the appliance due to risk of fire, explosion, or burns.
13. Always attach plug to unit first, then to outlet. To disconnect, turn all controls to the OFF position and then remove plug from outlet.
14. Keep lubricating oil away from children and pets.
15. Never operate this appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where it is possible for the air openings to be blocked. Keep the air openings free of lint, hair, and similar objects.
16. For the purpose of recharging the battery, use only the charging stand or cable included with this appliance.
17. Use only with a certified USB power source, such as a computer, outlet, lamp, class 2 power supply, or automotive adapter.

- 18. The appliance is intended for commercial use.
- 19. CAN ICES-3(B).
- 20. The supply terminals are not to be short-circuited.
- 21. Unplug charger before plugging in or unplugging appliance.

SAVE THESE INSTRUCTIONS

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: BaByliss®

Model No.: BFXRZ1

Description: Razor

Responsible Party: Conair LLC

1 Cummings Point Road
Stamford, CT 06902
(203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

DATE OF ISSUE: 00/00/2025

OPERATING INSTRUCTIONS

GENERAL

- Always inspect the appliance before use to ensure the trimmer blades are free from hair, debris etc.
- Use on clean, dry hair that has been combed until tangle-free.

TURNING ON THE ELECTRIC RAZOR

- To turn the trimmer on press the power button on the appliance. The LED light will illuminate and is ready for use.
- To turn off the trimmer, press the button on the appliance. The LED light will go off.

USER MAINTENANCE INSTRUCTIONS

CLEANING AND MAINTENANCE

- To maintain optimum performance, the appliance should be cleaned after each use.
- Remove the comb guide after use. Rinse under running water and dry thoroughly before storage or use.
- The blade is washable for easy cleaning. Rinse under running water to remove any hair and dry thoroughly before storage or use.
- Do not disassemble the blades.
- Blades last up to 6 months.
- Replaceable heads available at www.babylisspro.com.

TO FIT A REPLACEMENT BLADE

- Check that the trimmer is turned off.
- From the locked position (Fig. 3), to remove a trimming head from the handle, turn the head anticlockwise until the '▲' on the handle aligns with the '▼' on the head, then lift the head gently away from the handle. (Fig. 4).
- To reassemble the head onto the handle, align the '▼' on the head with the '▲' on the handle (Fig. 5) and then turn clockwise.
- When the '▼' on the head aligns with the '□' on the handle, the blade set from the trimmer (see Fig. 6).

Fig. 1

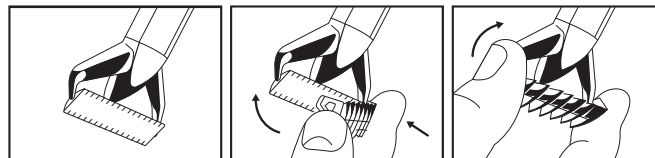 


Fig. 2

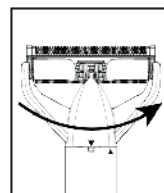 
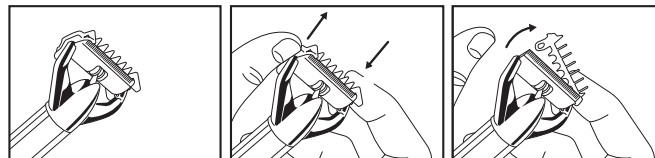 


Fig. 3

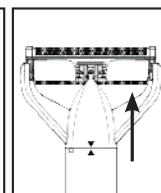 


Fig. 4

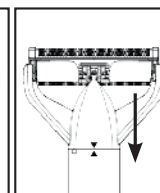 


Fig. 5

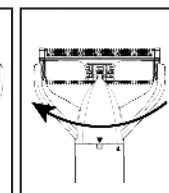 


Fig. 6

DO NOT RINSE CHARGING BASE.

COMB GUIDES

- This appliance is supplied with 4 comb guides for use with the trimmer.
- Trim to a precise length with one of the 4 stubble and short beard comb guides; 1, 2, 3 or 5mm.

Note: The trimmer can be used without any comb guides and will cut to 0.2mm.

ATTACHING AND REMOVING THE COMB GUIDES

- Position the comb guide over the blade at one side and gently push down until it snaps into position at the other side. (Fig. 1)
- To remove the comb guide gently hold one end. The other end, position your finger underneath the comb guide and gently push the comb guide away from the blade. (Fig. 2)

Note: See video at www.babyliss.com for video tutorial on how to attach and remove comb guide.

TRIMMING

- Switch the trimmer on.
- Hold the trimmer with the blade flat against the skin.
- Move the trimmer through the hair. The blade follows the contours of your face so you can shave comfortably in any direction.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never switch the appliance off whilst in the hair.

EDGING AND DETAILING

- To tidy up edges around your neckline and sideburns, detach the comb guide.
- Hold the appliance, so the front of the trimmer is facing towards your head.
- Hold the trimmer blades straight on your sideburns or neckline and move the trimmer blades downwards. This will give you a clean, smooth finish.

WATERPROOF IPX7

The trimmer and comb guides are 100% waterproof and can be used in the shower and bath. Always ensure to clean and allow the trimmer to dry after each use and before storing away. See “Cleaning & Maintenance” section.

TRAVEL LOCK

- To prevent the appliance from switching on unintentionally, you can lock the appliance using the ‘ON/OFF button marked with the .
- Press and hold down the ON/OFF button marked with the  for 2 seconds. The LED light will flash for 3 seconds to confirm the product is locked. If you want to unlock your appliance, press and hold down the  button marked with the  for 2 seconds. The appliance will then unlock and start to work normally.
- When charging the unit, the travel lock is automatically deactivated.

BATTERY SAFETY INFORMATION

1. This device contains a lithium-ion battery.
2. Battery is not to be removed by the consumer unless instructed by the manufacturer.
3. Since the battery is sensitive to high temperatures, when storing the trimmer, keep it in a cool, dry place.
4. Never put battery into a fire.
5. Switch off device after use.
6. Keep batteries away from children, especially batteries that are small enough to ingest.
7. If a battery is ingested, seek immediate medical help.
8. Never open, crush, puncture, or disassemble a battery.
9. Dispose of battery according to any state and local regulations.
10. Do not dispose of rechargeable battery as solid waste.
11. The battery must be removed from the appliance before it is recycled.
12. The appliance must be turned off before removing the battery.
13. The battery is to be disposed of safely.
14. The appliance must be disconnected from any power supply when removing the battery.

BATTERY DISPOSAL/RECYCLING

Lithium-ion batteries contain various materials that must be recycled and disposed of properly. Do not dispose of in the municipal waste system.

Under various state and local laws, it is illegal to dispose of this battery in the municipal waste stream. The EPA-certified RBRC™ battery recycling seal on the lithium-ion battery indicates that BaByliss Pro is voluntarily participating in an industry program to collect and recycle this battery at the end of its useful life, when taken out of service in the United States or Canada. The RBRC™ program provides a convenient alternative to placing the used lithium-ion battery in the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY™ for information on lithium-ion battery recycling and disposal bans/restrictions in your area. BaByliss Pro's involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Refer to the Call2Recycle® link here for the nearest recycling drop-off location: www.call2recycle.org/locator/.

 
DISPOSAL OF LITHIUM-ION BATTERY

- The battery must be removed from the appliance before it is recycled.
- The battery is to be recycled as a lithium-ion battery.


This trimmer contains a lithium-ion battery. To protect the environment, the battery should be properly disposed of when no longer taking a charge.

Take battery to an authorized battery recycling center. To find a drop-off recycling location near you, go to www.call2recycle.org/locator/.

CONTAINS A LITHIUM-ION BATTERY. MUST BE COLLECTED, RECYCLED, OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

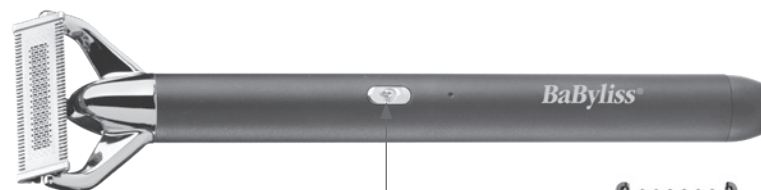

ON/OFF Button

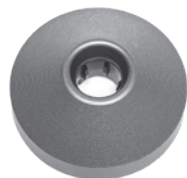 

Charging Stand



Magnetic Charging Cable



Comb Guide (1mm)



Comb Guide (2mm)



Comb Guide (3mm)



Comb Guide (5mm)

BFXRZ1 EXPLOSION DRAWING

CHARGING INSTRUCTIONS

CHARGING THE APPLIANCE

- Before using for the first time, the appliance should be fully charged continuously for 3 hours. This initial super-charge ensures optimum power performance to ensure smooth fast trimming every time. Maximum battery capacity will only be reached after 3 charging and discharging cycles.
- Attach the magnetic end of the charging cable to the charging stand, if supplied, or directly to the base of the unit.
- Plug the USB-C cable into a suitable adaptor and switch on at the wall. A white LED will blink whilst the unit is charging and remain on once fully charged.

Note: Always ensure the trimmer is off when charging.

- A full 3 hours charge will supply enough power for 45 minutes of use.
- Subsequent charges should be for 3 hours.
- When the trimmer is in use, and is running low on charge, the LED indicator light will flash, warning there is approximately 5 minutes of battery use remaining.
- If the charging light starts to flash rapidly (more than 4 flashes per second) then the appliance is faulty. If this happens then please stop charging and remove the adapter from the mains and contact the Conair Customer Care Line.
- At the end of the charging process, this appliance enters stand-by mode (power consumption <0.5W).

WARNING! To charge the product, only use a certified suitable USB power supply adaptor (BaByliss CA100) with an output rating of 5V, 1A, 5W. Using a noncertified or incorrect USB power supply adaptor may cause hazards or serious injuries.

The USB-C charging adaptor is available at www.babyliss.com.

PRESERVING THE BATTERIES

In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 3 hours every 6 months.

USB ADAPTOR

A USB power supply adaptor is not supplied for this product. If you require one for charging, you can visit www.babyliss.com and enter part code 35209960, under the "Spares & Accessories" section of the website.

If you need support in finding the correct USB power supply adaptor, contact the Conair Customer Care Line for further information.

WARNING! Using a non-certified USB power supply adaptor may cause hazards or serious injuries.

WITH BFXRZ1 ON CHARGING STAND

WARNING: If the charging light suddenly starts to flash rapidly, the battery is faulty. If this happens, stop charging, unplug the trimmer from the USB power source, and contact our Customer Care Center for further advice.

Use with the provided wall adapter (CA88M) or a certified USB power source.

Rated input voltage: 100-240V ~, 50/60Hz, 0.5A

Rated output: 5.0V DC, 2000mA

 
OPERATION

1. When not in use, unplug unit completely.
2. Unit will become warm during operation.

TRIMMER OPERATING PRECAUTIONS

This trimmer contains a rechargeable battery. Do not throw device or battery into fire, apply heat, or charge, use, or leave in a high-temperature environment.

**WARNING:
IF YOU THINK THE
POWER IS OFF
WHEN THE SWITCH IS OFF,
YOU'RE WRONG.**

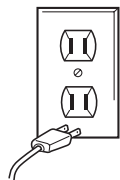

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

LIMITED WARRANTY

Subject to the exclusions and limitations contained herein, Babylliss Pro ("Babylliss Pro") warrants that the BaBylliss® Electric Razor ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of **TWO (2) years** beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Babylliss Pro or an authorized Babylliss Pro reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Babylliss Pro reseller, contact Babylliss Pro).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from Babylliss Pro;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Babylliss Pro approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of God or other events beyond Babylliss Pro's control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party may void this Limited Warranty;

- Damage caused by accessories or replacement parts not specifically authorized by BabyLiss Pro may void this Limited Warranty; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated from the Product.

HASSLE-FREE WARRANTY

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, BabyLiss Pro will, at its option, repair the Product or replace the Product with another identical or reasonably equivalent product, or if BabyLiss Pro is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at feedback@babylisspro.com, or call our Consumer Service Center toll-free at 1-800-326-6247 to speak with a representative.

Upon receipt of the Product, BabyLiss Pro will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond BabyLiss Pro's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than BabyLiss Pro's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-326-6247 to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

CALIFORNIA RESIDENTS ONLY

The **TWO (2) year** Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells BaBylissPRO® products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to BabyLiss Pro for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at 1-800-326-6247. BabyLiss Pro will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. BABYLISS PRO'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, BABYLISS PRO IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, LOSS OF GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF BABYLISS PRO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

Babyliiss Pro Division
Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-326-6247

IF YOU LIVE OUTSIDE CANADA, PLEASE CONTACT YOUR LOCAL DISTRIBUTOR.

CANADIAN 2-YEAR REPLACEMENT WARRANTY

BaByliissPRO Canada is the exclusive Canadian distributor of this product. We offer the following excellent warranty on your professional electrical appliance. Keep your sales receipt. This is your proof of purchase and your guarantee. This guarantee is not valid in case of abuse, misuse, alterations, or repairs done by unauthorized persons. Before returning your defective electrical product, please read the warranty conditions listed here.

Should your professional electrical appliance possess a manufacturer's defect, it may be exchanged by your distributor or BaByliissPRO Canada at no charge within TWO YEARS from date of purchase if the electrical appliance is accompanied by a proof of purchase.

If you are sending your defective appliance that is covered by this guarantee directly to the BaByliissPRO Canada Service Center, it must be accompanied by the following:

- 1) your dated sales receipt;
- 2) a precise description of the defect;
- 3) your complete return address and daytime phone number; and
- 4) a \$10 money order for postage and handling

Please return your defective appliance to:

ATTN: BaBylissPRO Canada Service Center

CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway

Woodbridge, Ontario

L4H 0L2

This warranty applies only to residents of Canada. Products shipped from outside of Canada will not be processed and will not be returned to sender.

For questions regarding this product, call the BaBylissPRO Canada Service Center at 1-800-363-0707 or email us at customerservice@dannyco.com.

IB-25/099