

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

- 1. Always unplug appliance immediately after using.
- 2. Do not use while bathing or in the shower.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into, water or other liquid.
- 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. This appliance should never be left unattended when plugged in.
- 2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to place of purchase for examination and repair.
- 5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.
- 6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
- 7. Never use while sleeping.
- 8. Never drop or insert objects into any opening.
- 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being admini stered.
- 10. Do not use an extension cord to operate this appliance.
- 11. Do not direct hot air toward eyes or other heat-sensitive areas.
- 12. Air outlet grille and attachments may be very hot during use. Allow them to cool before handling.
- 13. Do not place appliance on any surface while operating.
- 14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
- 15. To prolong the life of the dryer, keep filters clean of hair and dust.
- 16. Do not use with voltage converter.
- 17. Before plugging in, read the information about dual voltage contained in the "DUAL VOLTAGE" section of this manual.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for professional or household use. Use on alternating current (60/50 Hz) only. Standard appliances are designed to operate at 110–125 or 220–240 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This appliance has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug (not included) with correct configuration prior to use in outlet.

IMPORTANT PLUG SAFETY INSTRUCTIONS

This appliance is equipped with an auto-monitoring ALCI safety plug. READ AND SAVE THE INSTRUCTIONS PROVIDED IN A SEPARATE LEAFLET.

NANO TITANIUM

 
Your Nano Titanium AirSquare™ Dryer has many benefits. Nano Titanium is an exceptional conductor of heat and is stable in ultra-high temperatures. Nano Titanium technology uses micro particles of titanium to provide the ultimate heat performance for beautiful, healthy-looking hair.

ION GENERATOR

ALLOWS FOR FASTER DRYING, REDUCES FRIZZ, RETAINS MOISTURE, AND MAKES HAIR SMOOTHER.

IMPORTANT THIS APPLIANCE IS DESIGNED EXCLUSIVELY FOR USE BY LICENSED COSMETOLOGISTS

GET TO KNOW YOUR AIRSQUARE™ DRYER

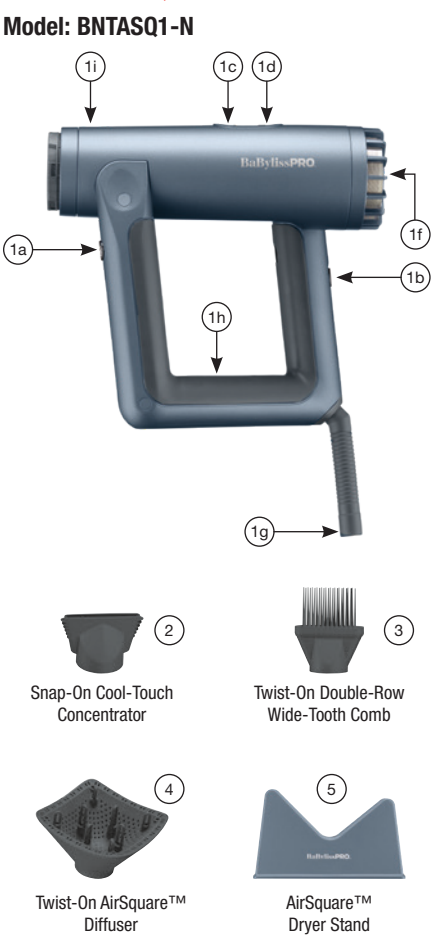

- 1. AirSquare™ Dryer Features a 2000-watt high-speed brushless motor with automatic dual voltage and a true ion generator.
 - a. Dual press-and-release cold shot buttons – Set and lock style in place
 - b. Power slide switch
 - c. 9 heat/speed settings with LED light display
 - d. Style-setting mode – Automatically sets and locks the dryer to the optimal heat and speed for styling hair. No manual adjustments needed!
 - e. Automatic memory function – The dryer automatically remembers and activates the last used settings upon turning on
 - f. Removable electronic-detection filter with clean-filter LED – Dryer automatically shuts off when filter is removed, and red LED light indicates when filter needs to be cleaned
 - g. 9-ft cord
 - h. Rubber-grip handle
 - i. True ion generator
- 2. Snap-on cool-touch concentrator
- 3. Twist-on double-row wide-tooth comb
- 4. Twist-on AirSquare™ diffuser
- 5. AirSquare™ dryer stand

FILTER LED INDICATORS:

- 1. The filter's WHITE LED light illuminates when the dryer is turned on and then fades out during use. The light is helpful for detecting dust and hair buildup on the filter.
- 2. The filter's WHITE LED light and all LED indicators breathe if the electronic-detection filter is missing. **NOTE:** The dryer will not turn on without the filter attached.
- 3. The filter's RED LED light breathes after 40 hours of runtime as a reminder to clean the filter. It will reset once the filter is removed and reattached.

TO SET HEAT/SPEED

- 1. Select the desired heat level by pressing the heat button repeatedly. The ORANGE LED lights will illuminate to indicate the chosen heat level.
- 2. Select the desired speed by pressing the speed button repeatedly. The WHITE LED lights will illuminate to indicate the chosen speed level.
- 3. To turn on the cold shot, press and release either cold shot button. To turn off, press and release the button again. The dryer will return to the used heat setting.
- 4. To activate the style-setting mode, press the heat button four times. 3 ORANGE LED lights, 1 RED LED light, and 3 WHITE LED lights will illuminate, and the style-setting mode will be locked. To unlock, simply press the heat button again. **NOTE:** Heat and speed cannot be adjusted while using the style-setting mode.

HEAT LED INDICATORS:

- Low - 1 ORANGE LED light lit



- Medium - 2 ORANGE LED lights lit



- High - 3 ORANGE LED lights lit



- Cold Shot - 3 BLUE LED lights lit



SPEED LED INDICATORS:

- Low - 1 WHITE LED light lit



- Medium - 2 WHITE LED lights lit

 


- High - 3 WHITE LED lights lit




STYLE-SETTING MODE LED INDICATORS:

- Optimal heat and speed for styling - 3 ORANGE LED lights, 1 RED LED light, and 3 WHITE LED lights lit

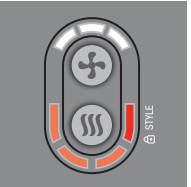


CLEANING THE FILTER: To ensure the longevity of your dryer, clean the filter regularly according to the following steps. We recommend cleaning the dryer's filter after 40 hours of use, when the filter's red LED light starts breathing, or when buildup is visible.

 
- 1. WITH THE DRYER TURNED ON, remove the filter cover from the back of the dryer by lightly twisting it counterclockwise. The filter's white LED light and all LED indicators will flash, then the dryer will turn off.

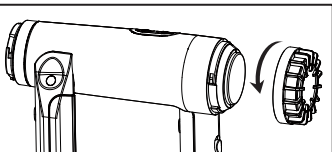

 - 2. Rinse the filter cover under hot water and set aside to dry completely before reattaching (DO NOT INSTALL IF THERE IS ANY EVIDENCE OF WATER ON THE FILTER).

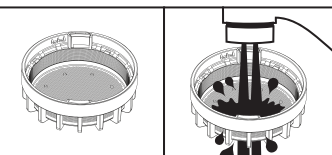


 - 3. Using a soft brush or cloth, gently remove any excess dust or hair on the fixed mesh filter of the dryer.

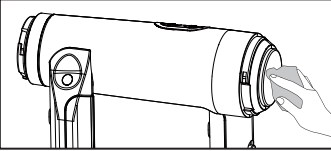

- 4. Once the filter cover is completely dry, reattach it onto the back of the dryer by lightly twisting clockwise.

 NOTE: When the dryer is turned back on, the filter's white LED will flash for 10 seconds, and the red Clean-Filter LED will reset.

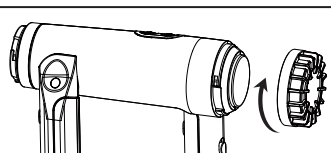

WARNING: Do not attempt to remove the fixed mesh filter. It is permanently attached to the dryer. If your dryer does not operate after cleaning the filter cover and fixed mesh filter, do not attempt to use. Please call Customer Service at 800-326-6247.



This message about...

GROUND

FAULT

CIRCUIT

INTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI?

Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...even if the switch is off.

A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

**A GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the flow of electricity.*

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: BaBylissPRO®

Model No.: BNTASQ1-N

Description: AirSquare™ Dryer

Responsible Party: Conair LLC
1 Cummings Point Road
Stamford, CT 06902
(203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

DATE OF ISSUE: 06/13/2025

USER MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. The dryer must be kept clean for proper operating performance. When cleaning is needed, unplug the cord, allow to cool, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, turn the dryer off, unplug the cord, and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.** If the cord or dryer is damaged or does not operate properly, return it for repair to place of purchase or to an authorized BaBylissPRO service representative only. No repairs should be attempted by the consumer.

STORAGE – IMPORTANT

When not in use, your dryer should be disconnected, allowed to cool, and stored in a safe, dry location, out of reach of children. **Do not wrap line cord around dryer.** Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

LIMITED WARRANTY

Subject to the exclusions and limitations contained herein, BaByliss Pro ("BaByliss Pro") warrants that the BaBylissPRO® Airsquare™ Professional Dryer ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of TWO (2) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from BaByliss Pro or an authorized BaByliss Pro reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized BaByliss Pro reseller, contact BaByliss Pro).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from BaByliss Pro;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior BaByliss Pro approval;

- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of God or other events beyond BaByliss Pro's control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any unauthorized third party may void this Limited Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by BaByliss Pro may void this Limited Warranty; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated from the Product.

HASSLE-FREE WARRANTY

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, BaByliss Pro will, at its option, repair the Product or replace the Product with another identical or reasonably equivalent product, or if BaByliss Pro is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at feedback@babylisspro.com, or call our Consumer Service Center toll-free at 1-800-326-6247 to speak with a representative.

Upon receipt of the Product, BaByliss Pro will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond BaByliss Pro's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than BaByliss Pro's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-326-6247 to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

CALIFORNIA RESIDENTS ONLY

The TWO (2) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells BaBylissPRO® products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to BaByliss Pro for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at 1-800-326-6247. BaByliss Pro will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT

THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:
BaByliss Pro Division
Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-326-6247

©2026 Distributed by BaBylissPRO,
Stamford, CT 06902

Model: BNTASQ1-N

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

