

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions must always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Except when charging, always unplug charger, charging cable or wireless charging mat from electrical outlet immediately after using.**
2. Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
3. Do not use appliance while bathing or in the shower.
4. Do not reach for an appliance that has fallen into water. Unplug immediately from outlet.
5. Unplug charger or charging cable before cleaning.

WARNING

— To reduce the risk of burns, electric shock, fire, or injury to persons:

1. **Never leave a plugged-in appliance unattended, except when charging.**
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Use appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.
4. **Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or has been dropped into water. Return the appliance to a BabyLissPRO Service Center for examination and repair.**
5. Keep the appliance cord away from heated surfaces.
6. Do not pull, twist or wrap the cord around the appliance.
7. Keep the air openings free of lint, hair, and similar objects.
8. Never drop or insert any object into any opening on the appliance.

9. Do not place the appliance on any surface while it is operating.
10. Do not use this appliance with a damaged or broken foil or cutter, as injury to skin may occur.
11. Do not use the appliance outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
12. Do not crush, heat above 212°F (100°C) or incinerate the appliance, due to risk of fire, explosion or burns.
13. Always attach plug to appliance first, then to outlet. To disconnect, turn control to OFF (O) position, then remove from outlet.
14. Use only with a certified USB power source, such as a computer, outlet, lamp, class 2 power supply, or automotive adapter.
15. The appliance is intended for commercial use.
16. CAN ICES-3(B).
17. Unplug charger before plugging or unplugging appliance.
18. The supply terminals are not to be short-circuited.
19. Do not use appliance while bathing or in the shower.
20. Keep the appliance dry.
21. To prevent unintentional starting: Make sure the switch is in the OFF position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch risks energizing the appliance and may cause injury.

22. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help immediately. Liquid ejected from the battery may cause irritation or burns.
23. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
24. Do not expose the battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 266°F (130°C) may cause explosion.
25. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging the appliance improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
26. Have servicing performed by a qualified repair person, using only identical replacement parts. This will ensure that the safety of the product is maintained.
27. Do not modify or attempt to repair the appliance or the battery pack, except as indicated in the instructions for use and care.
28. Do not use unapproved power sources.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS


CHARGING INSTRUCTIONS

The FXT45FS features USB-C, standard FXCORD, and wireless inductive charging capabilities. To charge using a USB-C cable (included): Connect the USB-C cable to the USB-C port at the bottom of the FXT45FS shaver. Connect the other end of the cable to the USB adapter, then plug adapter into an outlet.

To charge using the standard FXCORD (not included): Connect the standard FXCORD charging cord to the standard port at the bottom of the FXT45FS shaver and plug the cable into power outlet. Note: You may use the unit while charging. This function is only available with the FXCORD.




To charge using a wireless charging mat: Place the FXT45FS shaver on a certified standard inductive wireless charging mat (not included), aligning the center of the shaver with the center of the charging mat. When the shaver is properly aligned on the charging mat, the charge percentage will display on the LED screen.



WARNING: If the charging light suddenly starts to flash rapidly, the batteries are faulty. If this happens, stop charging, unplug the FXT45FS shaver from the outlet/USB power source, and contact our Customer Care Center for further advice.

BATTERY CHARGE-LEVEL INDICATOR

The FXT45FS shaver has an LED screen that indicates the charge level of the battery. The charge level percentage will display while the unit is charging, as well as when the shaver is turned on.

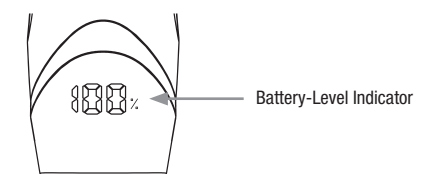

Preserving the batteries: In order to maintain the optimum capacity of the rechargeable batteries, they should be recharged for 3 hours approximately every 6 months.

Use the standard FXCORD (not included).
Rated input voltage: 100-240V ~, 50/60Hz, 0.2A
Rated output: 4.5V DC, 1200mA
OR

Use the included USB-C cable and USB adapter CA88M, or a certified USB power source.
Rated input voltage: 100-240V ~, 50/60Hz, 0.5A
Rated output: 5.0V DC, 2000mA
OR
Use a certified standard inductive wireless charging mat (not included).

OPERATION

1. For dry location use only. Do not expose to water.
2. When not in use, unplug unit completely (except when charging).
3. Unit will become warm during operation.
4. Charging temperature range: 41°F (5°C) to 113°F (45°C)
Operating temperature range: -4°F (-20°C) to 140°F (60°C)
Storage temperature range: 59°F (15°C) to 95°F (35°C)

ON/OFF SWITCH

To operate the shaver, press the button once to turn unit on. The button will illuminate to indicate that the unit is on. To stop operation, press the button to turn unit off.

DUAL-SPEED MOTOR SETTING

This shaver is equipped with two motor speeds. The default setting is the lower speed (8500 RPM). To change the shaver to the high speed setting (9500 RPM), first turn the unit on by pressing the button, then press the button to change to the higher speed setting. Note: The speed can only be changed while the shaver is on. Do not change speed while cutting.

SHAVER OPERATING PRECAUTIONS

This shaver contains a rechargeable battery. Do not throw unit or battery into fire, apply heat, or charge, use, or leave in a high-temperature environment.

VERY IMPORTANT: Cutters must be cleaned and oiled on a regular basis for proper functioning. Failure to regularly clean and oil the cutters will void the warranty.

BASIC INSTRUCTIONS FOR USE

1. Men whose skin is sensitive or easily irritated by shaving, or who suffer from a skin allergy, should test the shaver on one section of the leg or arm before using it.
2. Remove the cap and turn on the unit to start shaving. Hold the shaver at a right angle to the area that you want to shave and run the double shaving foils carefully along your skin. Tip: In general, we recommend that you shave against the direction of hair growth, as this is the best way to trim the hair. Pull your skin tight with your fingers in inaccessible areas to achieve optimum results.
3. Switch the shaver off after each use and clean it.
4. Do not push the shaver on the skin too hard, as this could cause irritation, make the shaver warm and prevent a perfect shave.
5. Please note that it takes 2 to 4 weeks for your skin to adapt to a shaver, so do not change shaving instruments during this period of time.

6. If hair is longer than 1/32", begin by cutting the hair down first with a trimmer, then use the shaver for a smooth, close shave.

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: BabyLissPRO®

Model No.: FXT45FS

Description: Shaver

Responsible Party: Conair LLC

1 Cummings Point Road,

Stamford, CT 06902

(203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

DATE OF ISSUE: 06/15/2026

USER MAINTENANCE INSTRUCTIONS

TAKING CARE OF YOUR SHAVER

Do not remove the shaving foil head while the shaver is switched on. Always switch the shaver off!

Ensure that no water gets into the inside of the shaver to avoid the risk of an electric shock when it is back in operation.

Never press on the cutters or the shaving foils and do not touch them with hard objects, as this can cause irreparable damage to the shaver or parts.

Be careful when dealing with the cutters, as they are very sharp — risk of injury!

When cleaning, do not apply any detergents or scouring agents and do not use any abrasive or sharp objects. They can cause irreparable damage to the shaver.

NOTE: WHEN CLEANING YOUR SHAVER, MAKE SURE IT IS TURNED OFF.


CAUTION!

- To clean the external surfaces of the shaver, use a damp cloth. DO NOT APPLY ANY DETERGENTS.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- Be sure voltage is correct before plugging in. For connection to power supply not in the U.S.A. use an attachment plug adapter of the proper configuration for power outlet. The included adapter automatically adjusts to the input voltage. **DO NOT USE A VOLTAGE CONVERTER.**

NOTE: Always replace the cutters and foil head assembly at the same time.


TO REPLACE FOIL HEAD ASSEMBLY

1. Remove the foil head assembly by simply pulling away vertically from the shaver body. Hold the foil head assembly on both sides and lightly pull away from shaver unit.
2. Take the replacement foil head assembly (FXT45RF2) out of package. Align the replacement foil head assembly over the drive pins, making sure to align the indicating arrows on the foil head and the shaver body. Failure to do this may result in damage to the shaver, cutters, and foil assembly.
3. Carefully move the replacement foil head assembly down toward the shaver unit until it firmly snaps into place. **BE CAREFUL! NOT TO DAMAGE THE FOILS OR CUTTERS WHILE INSTALLING.**

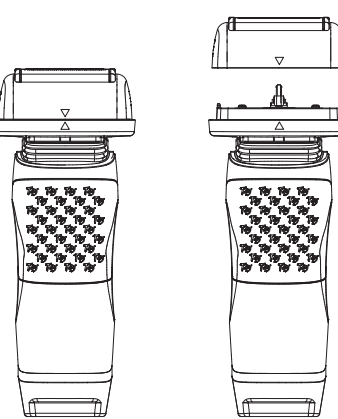


Daily Maintenance:

1. Repeat steps 1 to 3 from the Daily Maintenance cleaning steps.
2. Rinse the head of the shaver under running water (see Fig. 5).
3. Leave head detached for drying.
4. Press the shaver head back into place (see Fig. 4).

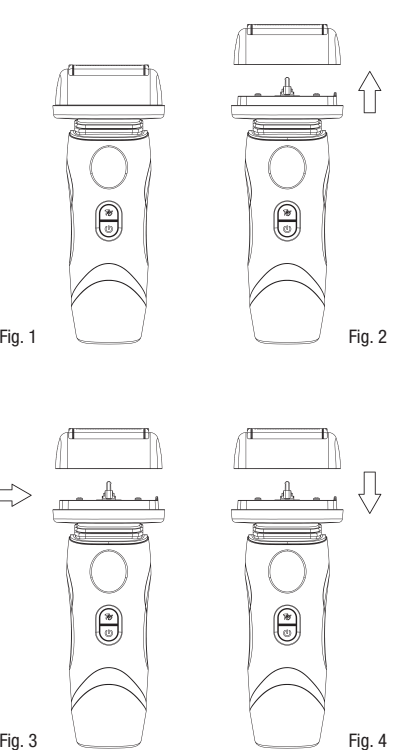

Weekly Maintenance:

1. Repeat steps 1 to 3 from the Daily Maintenance cleaning steps.
2. Rinse the head of the shaver under running water (see Fig. 5).
3. Leave head detached for drying.
4. Press the shaver head back into place (see Fig. 4).

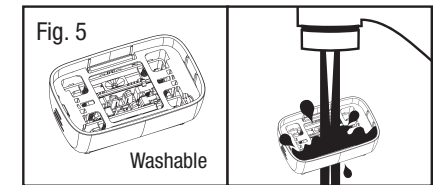

BATTERY SAFETY INFORMATION

1. This device contains one lithium 18500 battery.
2. Battery is not to be removed by the consumer unless instructed by the manufacturer.
3. Since the battery is sensitive to high temperatures, when storing the device, keep it in a cool, dry place.
4. Never put battery into a fire.
5. Switch off device after use.
6. Keep batteries away from children, especially the batteries that are small enough to ingest.
7. If a battery is ingested, seek immediate medical help.
8. Never open, crush, puncture or disassemble a battery.
9. Dispose of battery according to any state and local regulations.
10. Do not dispose of rechargeable battery as solid waste.
11. The battery must be removed from the appliance before it is recycled.
12. The appliance must be disconnected from the power supply when removing the battery.
13. The battery is to be disposed of safely.

BATTERY DISPOSAL/RECYCLING

Lithium-ion batteries contain various materials that must be recycled and disposed of properly. Do not dispose of in the municipal waste system. Under various state and local laws, it is illegal to dispose of this battery in the municipal waste stream. The EPA-certified RBRC™ battery recycling seal on the lithium-ion battery indicates BaByliss Pro is voluntarily participating in an industry program to collect and recycle this battery at the end of its useful life, when taken out of service in the United States or Canada. The RBRC™ program provides a convenient alternative to placing the used lithium-ion battery in the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY™ for information on lithium-ion battery recycling and disposal bans/restrictions in your area. BaByliss Pro involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Refer to the Call2Recycle link here for the nearest recycling drop-off location:
<https://www.call2recycle.org/locator/>




IMPORTANT:

- The battery is to only be replaced by a BaBylissPRO Authorized Service Center.
- The battery must be removed from the appliance before it is recycled.
- The battery is to be recycled as a lithium-ion battery.

To remove the battery block for disposal or recovery, follow these instructions:

1. The battery in this shaver is protected in a plastic housing.
2. Press on tabs and pull battery housing out of shaver.
3. No further disassembly of the battery unit is required.
4. Take to an authorized battery recycling center and recycle the entire battery unit.


CONTAINS A LITHIUM-ION BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

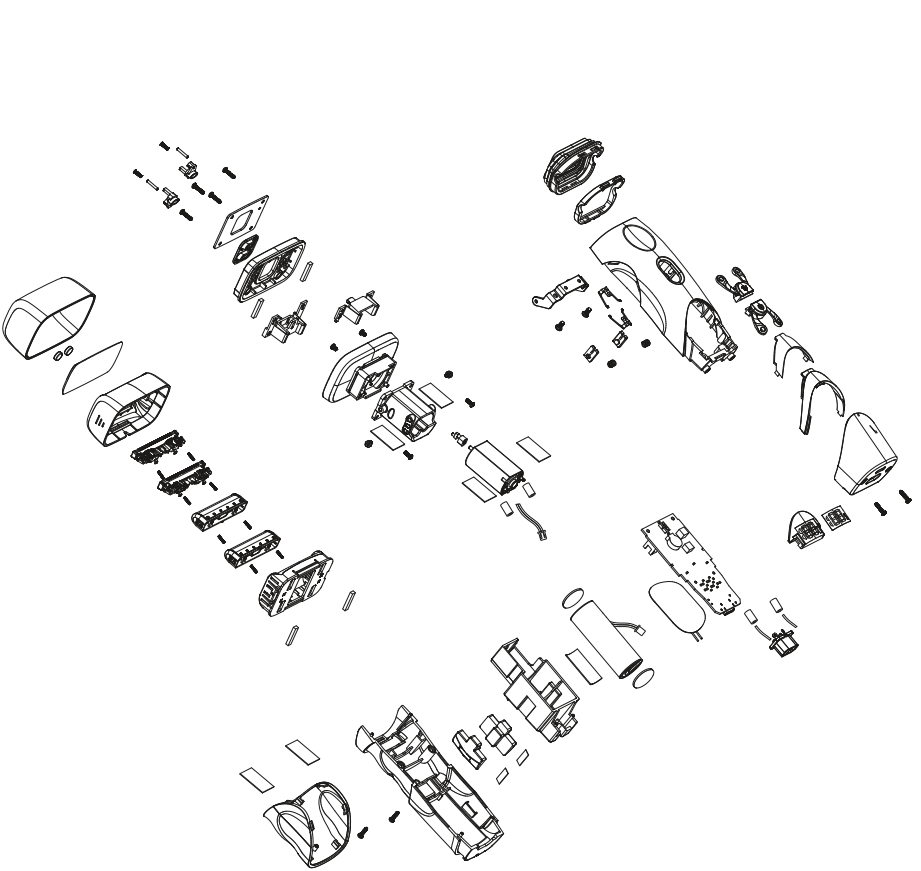

FXT45FS WIRELESS-CHARGING PIVOTING-HEAD DOUBLE-FOIL SHAVER



WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

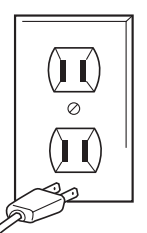

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using appliances, keep them unplugged.

LIMITED WARRANTY

Subject to the exclusions and limitations contained herein, BabyLiss Pro ("BabyLiss Pro") warrants that the BabyLissPRO™ Tomb45 Wireless-Charging Pivoting-Head Double-Foil Shaver ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of TWO (2) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from BabyLiss Pro or an authorized BabyLiss Pro reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized BabyLiss Pro reseller, contact BabyLiss Pro).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from BabyLiss Pro;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior BabyLiss Pro approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with

electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of God or other events beyond BabyLiss Pro's control;

- Damage caused by you or any unauthorized third party, even though necessary repairs and maintenance might be performed by any company;
- Damage caused by accessories or replacement parts not specifically authorized by BabyLiss Pro; and

- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated from the Product.

HASSLE-FREE WARRANTY

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, BabyLiss Pro will, at its option, repair the Product or replace the Product with another identical or reasonably equivalent product, or if BabyLiss Pro is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at feedback@babylisspro.com, or call our Consumer Service Center toll-free at 1-800-326-6247 to speak with a representative.

Upon receipt of the Product, BabyLiss Pro will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond BabyLiss Pro's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than BabyLiss Pro's Authorized Service Center, please remind the service to call our Consumer Service Center at 1-800-326-6247 to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

CALIFORNIA RESIDENTS ONLY

The TWO (2) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells BabyLissPRO® products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according

to their preference, return nonconforming products directly to BabyLiss Pro for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at 1-800-326-6247. BabyLiss Pro will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. BABYLISS PRO'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, BABYLISS PRO IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED

TO, LOST PROFITS, DOWNTIME, LOSS OF GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF BABYLISS PRO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

BabyLiss Pro Division
Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-326-6247

IF YOU LIVE OUTSIDE OF CANADA, PLEASE CONTACT YOUR LOCAL DISTRIBUTOR.

CANADIAN 2-YEAR REPLACEMENT WARRANTY

BaBylissPRO Canada is the exclusive Canadian distributor of this product. We offer the following excellent warranty on your professional electrical appliance. Keep your sales receipt. This is your proof of purchase and your guarantee. This guarantee is not valid in case of abuse, misuse, alterations or repairs done by unauthorized persons. Before returning your defective electrical product, please read the warranty conditions listed here.

Should your professional electrical appliance possess a manufacturer's defect, it may be exchanged by your distributor or BaBylissPRO Canada at no charge within TWO YEARS from date of purchase if the electrical appliance is accompanied by a proof of purchase.

If you are sending a defective appliance that is covered by this warranty to the BaBylissPRO Canada Service Center, it must be accompanied by the following:

- 1) your dated sales receipt;
- 2) a precise description of the defect;
- 3) your complete return address and daytime phone number; and,
- 4) a \$10 money order for postage and handling

Please return your defective appliance to:

ATTN: BaBylissPRO Canada Service Center
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge, Ontario
L4H 0L2

This warranty applies only to residents of Canada. Products shipped from outside of Canada will not be processed and will not be returned to sender.

For questions regarding this product, call the BaBylissPRO Canada Service Center at 1-800-363-0707, or email us at customerservice@damnyco.com or customer_service@babylisspro.ca

BaBylissPRO®

Tomb45



WIRELESS-CHARGING PIVOTING-HEAD DOUBLE-FOIL SHAVER

Operating Instructions Model FXT45FS

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

PRÉCAUTIONS IMPORTANTES

L'utilisation d'appareils électriques, notamment en présence d'enfants, requiert la prise de précautions élémentaires, parmi lesquelles les suivantes :

LIRE TOUTES LES INSTRUCTIONS AVANT L'UTILISATION

TENIR LOIN DE L'EAU

DANGER – Un appareil électrique est toujours sous tension lorsqu'il est branché, même lorsqu'il est éteint. Pour réduire le risque de blessures ou de mort par électrocution :

- Toujours débrancher le chargeur, le câble de charge ou le tapis de recharge sans fil de la prise électrique immédiatement après utilisation.**
- Ne pas placer ou ranger l'appareil dans un endroit où il peut tomber ou être entraîné dans une baignoire ou un lavabo. Ne pas placer ou laisser tomber l'appareil dans l'eau ou tout autre liquide.
- Ne pas utiliser dans le bain ou la douche.
- Si l'appareil tombe à l'eau, ne pas tenter de le rattraper ; le débrancher immédiatement.
- Débrancher le chargeur et le câble de charge avant le nettoyage.

INFORMATIONS DE SÉCURITÉ AU SUJET DE LA BATTERIE

- Cet appareil renferme une batterie au lithium 18500.
- La batterie ne doit pas être retirée par le consommateur, sauf instructions contraires du fabricant.
- Conserver l'appareil dans un endroit frais et sec, car la batterie est sensible aux températures élevées.
- Ne jamais jeter la batterie au feu.
- Toujours éteindre l'appareil après usage.
- Garder les piles/batteries hors de portée des enfants, surtout celles qui sont assez petites pour être ingérées.
- En cas d'ingestion accidentelle, consulter immédiatement un médecin.
- Ne jamais ouvrir, écraser, percer ou démonter les batteries.
- Mettre la batterie au rebut conformément aux réglementations régionales et locales.
- Ne pas jeter la batterie avec les déchets ménagers.
- Retirer la batterie de l'appareil avant de le recycler.
- Toujours débrancher l'appareil avant de retirer la batterie.
- Recycler la batterie en toute sécurité, conformément aux normes en vigueur.

AVERTISSEMENT

Afin de réduire le risque de brûlures, de choc électrique, d'incendie ou de blessures :

- Une fois branché, ne jamais laisser l'appareil sans surveillance.**
- Cet appareil ne devrait pas être utilisé par des enfants ou des personnes atteintes de certains handicaps physiques, mentaux ou sensoriels, ou qui ne disposent pas des connaissances ou de l'expérience nécessaires, à moins qu'une personne responsable de leur sécurité leur en ait expliqué le fonctionnement ou les encadre. Veiller à ce que les enfants ne jouent pas avec l'appareil.
- Utiliser cet appareil uniquement aux fins indiquées dans ce manuel. Utiliser uniquement les accessoires recommandés par le fabricant. Brancher le chargeur et le câble de charge directement dans une prise électrique ; ne pas utiliser de rallonge.
- Ne pas utiliser l'appareil si le cordon d'alimentation ou la fiche sont endommagés, s'il ne fonctionne pas correctement, s'il est abîmé ou après qu'il est tombé/tombé à l'eau ; le retourner à un centre de service BaBylissPRO autorisé afin qu'il soit inspecté et réparé.**
- Tenir le cordon éloigné des surfaces chaudes.
- Ne pas tirer, tordre ou enrouler le cordon d'alimentation autour de l'appareil.
- Vérifier que les orifices de ventilation ne sont pas obstrués par des peluches, cheveux ou autres saletés.

MISE AU REBUT/RECYCLAGE DES BATTERIES

Les batteries lithium-ion contiennent des matériaux qui doivent être recyclés selon les normes en vigueur. Ne pas les jeter avec les ordures ménagères. Ne pas jeter la batterie ou l'appareil avec les ordures ménagères.

Selon la réglementation régionale ou locale en vigueur, il se peut qu'il soit illégal de jeter cette batterie avec les ordures ménagères. Le socle RBRC™ sur la batterie, certifié par l'Agence de protection de l'environnement des États-Unis, indique que BaByliss Pro participe volontairement au programme de collection et recyclage des batteries lithium-ion en fin de vie utile, aux É.-U. et au Canada. Le programme RBRC™ offre une alternative pratique à jeter les batteries lithium-ion usées à la poubelle ou avec les déchets municipaux, ce qui peut être illégal dans votre région. Appeler le 1-800-8-BATTERY™ pour plus d'informations sur le recyclage des batteries lithium-ion et les interdictions/restrictions dans votre région. La participation de BaByliss Pro à ce programme fait partie de notre engagement à préserver notre environnement et à conserver nos ressources naturelles.

Pour trouver le point de collecte/recyclage le plus proche, visiter : <https://www.call2recycle.org/locator/>

IMPORTANT :

- La batterie ne doit être remplacée que par un centre de service BaBylissPRO autorisé.
- Retirer la batterie de l'appareil avant de le recycler.
- La batterie doit être recyclée conformément aux normes de recyclage des batteries lithium-ion.

Suivre ces instructions pour retirer une batterie pour sa mise au rebut ou son recyclage :

- La batterie est à l'intérieur du boîtier interne en plastique.
- Pour retirer la batterie, appuyer sur les deux ergots situés au bas du boîtier et tirer.
- Il n'est pas nécessaire de démonter la batterie.
- Apporter la batterie à un centre de recyclage de batteries autorisé.

CET APPAREIL RENFERME UNE BATTERIE LITHIUM-ION, À RECYCLER SELON LES NORMES EN VIGUEUR. NE PAS LE JETER AVEC LES ORDURES MÉNAGÈRES.



- Ne jamais rien insérer ou laisser tomber dans les ouvertures.
- Ne poser l'appareil sur aucune surface pendant le fonctionnement.
- Afin d'éviter les risques de blessures, ne pas utiliser l'appareil si la grille ou le couteau (lames internes) sont endommagés.
- Ne pas utiliser à l'extérieur ou dans des endroits où l'on utilise des produits aérosols (spray) ou où l'on administre de l'oxygène.
- Ne pas écraser, incinérer ou exposer l'appareil à une température supérieure à 100 °F (212 °C) ; cela présente un risque d'incendie, d'explosion ou de brûlures.
- Toujours connecter le cordon électrique à l'appareil avant de le brancher dans la prise de courant. Toujours éteindre ("O") l'appareil avant de le débrancher.
- Utiliser uniquement une source d'alimentation USB homologuée, telle qu'un ordinateur, un adaptateur USB de classe 2 ou un chargeur USB.
- Cet appareil est à usage professionnel.
- CAN ICES-3(B).
- Débrancher le chargeur avant de connecter/déconnecter l'appareil.
- Prendre garde de ne pas court-circuiter les bornes d'alimentation.
- Ne pas utiliser dans le bain ou la douche.
- Ne pas mouiller l'appareil et le tenir au sec.
- Pour éviter que l'appareil se mette en marche par accident : Vérifier que l'interrupteur est sur "OFF" avant de prendre ou de transporter que seulement des pièces de rechange

- Ne pas essayer de modifier la batterie ou l'appareil, et ne pas l'utiliser s'il est endommagé ou a été modifié. Une batterie endommagée ou modifiée peut fonctionner anormalement, présentant un risque d'incendie, d'explosion ou de blessure.
- Ne pas exposer la batterie ou l'appareil au feu ou à des températures excessives. L'exposition au feu ou à une température supérieure à 266 °F (130 °C) peut provoquer une explosion.
- Suivre les instructions de charge et ne pas charger l'appareil à des températures inférieures/supérieures aux températures indiquées. Charger l'appareil contrairement aux instructions ou l'exposer à des températures inférieures/supérieures aux températures indiquées peut endommager la batterie et augmenter le risque d'incendie.
- En cas de besoin, faire réparer l'appareil par un technicien qualifié, et veiller à ce que seulement des pièces de rechange

identiques soient utilisées. Le non-respect de ces instructions peut présenter un risque pour l'utilisateur.

- Ne pas modifier ni essayer de réparer l'appareil ou la batterie. Les seules opérations d'entretien permises sont celles indiquées dans les instructions de nettoyage et d'entretien.
- Ne pas utiliser de sources d'alimentation non homologuées.

CONSERVER CES INSTRUCTIONS DIRECTIVES D'UTILISATION

INSTRUCTIONS DE CHARGE

Le rasoir FXT45FS est compatible avec la recharge sans fil par induction, la recharge par cordon FXCORD et la recharge par câble USB. Recharge par câble USB-C (inclus) : Brancher le câble USB-C dans la prise USB-C au bas de l'appareil. Connecter l'autre extrémité du câble à l'adaptateur USB inclus, puis brancher l'adaptateur dans une prise de courant.

Recharge par cordon FXCORD (non inclus) : Connecter le cordon de charge FXCORD à la prise de charge standard au bas de l'appareil et brancher l'adaptateur dans une prise de courant. Remarque : L'appareil peut être utilisé pendant la charge. Cette fonction n'est disponible que lorsque vous chargez l'appareil à l'aide du cordon FXCORD.




Recharge par tapis de charge sans fil : Placer l'appareil sur un tapis de charge sans fil par induction certifié (non fourni), en alignant le centre de l'appareil sur le centre du tapis de charge. Une fois alignés, le pourcentage de charge apparaîtra sur l'afficheur LED.



AVERTISSEMENT : Si l'indicateur de charge se met soudainement à clignoter rapidement, cela signifie que la batterie est défectueuse. Si cela se produisait, interrompre la charge, débrancher l'appareil (le cas échéant) et contacter notre service à la clientèle pour plus d'informations.

INDICATEUR DE NIVEAU DE CHARGE


Le rasoir FXT45FS est muni d'un afficheur LED qui indique le niveau de charge. Le pourcentage de charge s'affiche lorsque l'appareil est en cours de chargement et lorsqu'il est allumé. Il se peut que l'appareil chauffe légèrement pendant le chargement ; cela est normal.

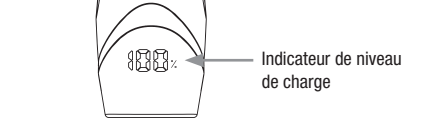

RASOIR À DOUBLE GRILLE À TÊTE PIVOTANTE ET À CHARGE SANS FIL FXT45FS



AVERTISSEMENT : SI VOUS PENSEZ QUE LE COURANT EST COUPÉ PARCE QUE L'APPAREIL EST ÉTEINT, VOUS VOUS TROMPEZ.

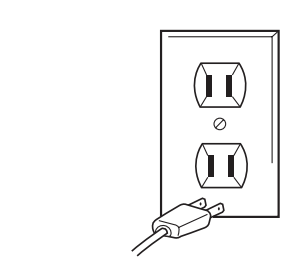

Tout le monde sait que l'eau et l'électricité ne font pas bon ménage, mais saviez-vous qu'un appareil est toujours sous tension, même lorsqu'il est éteint ? S'il est branché, il est sous tension. Alors, si vous n'utilisez pas l'appareil, débranchez-le.

Conseil pour prolonger la durée de vie de la batterie : Afin d'optimiser la durée de vie de la batterie rechargeable, il est conseillé de la recharger pendant 3 heures tous les 6 mois.

Recharge par cordon FXCORD (non inclus). Tension nominale d'entrée : 100–240 V~ ; 50/60 Hz ; 0,2 A

Tension nominale de sortie : 4,5 V C.C. ; 1200 mA OU

Utiliser l'adaptateur USB fourni (CA88M) ou une source d'alimentation USB homologuée, avec le câble USB-C fourni.

Tension nominale d'entrée : 100–240 V~ ; 50/60 Hz ; 0,5 A

Tension nominale de sortie : 5 V C.C. ; 2000 mA OU

Utiliser tapis de recharge sans fil par induction certifié (non inclus).

DIRECTIVES D'UTILISATION

- Utiliser dans un endroit sec uniquement. Ne pas exposer à l'eau.
- Débrancher l'appareil lorsque vous ne l'utilisez pas (sauf pendant le chargement).
- L'appareil chauffe légèrement pendant l'utilisation ; cela est normal.
- Plage de température de charge : 41 °F (5 °C) à 113 °F (45 °C)

- Plage de température de fonctionnement : -4 °F (-20 °C) à 140 °F (60 °C)
- Plage de température de stockage : 59 °F (15 °C) à 95 °F (35 °C)

MARCHE/ARRÊT

Appuyer sur la touche pour allumer l'appareil ; le voyant lumineux s'allumera. Pour arrêter l'appareil, appuyer sur la touche .

RÉGLAGE DE LA VITESSE

Ce rasoir est équipé d'un moteur à deux vitesses. La vitesse par défaut est la vitesse basse (8500 tr/min). Pour utiliser la vitesse haute (9500 tr/min) : Appuyer sur la touche pour allumer l'appareil, puis appuyer sur la touche pour changer la vitesse. Remarque : La vitesse ne peut être changée que lorsque l'appareil est allumé. Ne pas changer la vitesse pendant la coupe.

PRÉCAUTIONS GÉNÉRALES

Cet appareil renferme une batterie rechargeable. Ne pas incinérer/jeter au feu l'appareil ou la batterie, les chauffer, ni les utiliser, les charger ou les laisser dans un environnement à haute température.

TRÈS IMPORTANT : Il est essentiel de nettoyer et lubrifier les couteaux (lames internes) régulièrement afin d'assurer le bon fonctionnement de l'appareil. Le non-respect de ces instructions annulera la garantie.

INSTRUCTIONS D'UTILISATION DE BASE

- Si votre peau est sensible ou s'irrite facilement quand vous vous rasez, ou si vous souffrez d'une allergie cutanée, faire un essai préalable sur une petite partie du bras ou de la jambe avant d'utiliser l'appareil.

- Retirer le couvercle magnétique et allumer l'appareil. Tenir le rasoir en angle droit sur la zone que vous souhaitez raser et faire glisser les grilles doucement contre la peau. Conseil : En règle générale, raser les poils dans le sens contraire de la pousse est la méthode de rasage la plus efficace. Pour de meilleurs résultats, étirer la peau dans les zones difficiles d'accès.
- Après l'utilisation, éteindre l'appareil et le nettoyer.

- Ne pas trop appuyer contre la peau pendant le rasage ; cela peut provoquer des irritations, faire surchauffer l'appareil et nuire à la qualité du rasage.
- Si les poils mesurent plus de 1/32 po (1 mm), il est conseillé de les couper à la tondeuse avant de les raser ; vous obtiendrez ainsi un rasage au plus près.

DÉCLARATION DE LA COMMISSION FÉDÉRALE DE COMMUNICATIONS (FCC)
AVERTISSEMENT : Toute modification apportée à cet appareil sans l'approbation expresse de l'autorité compétente en matière de conformité peut résilier le droit de l'utilisateur d'utiliser l'appareil.
Cet appareil est conforme à la section 15 des normes de la FCC. Son fonctionnement est sujet à deux conditions : (1) Cet appareil ne doit pas causer d'interférences nuisibles et (2) cet appareil doit accepter les interférences reçues, y compris celles qui pourraient provoquer un fonctionnement indésirable.

- Réorienter l'antenne réceptrice ou la changer de place.
- Éloigner l'appareil du poste récepteur.
- Brancher l'appareil sur un circuit différent de celui sur lequel est branché le poste récepteur.
- Contacter le distributeur ou un technicien radio/TV.

pas causer d'interférences nuisibles et (2) cet appareil doit accepter les interférences reçues, y compris celles qui pourraient provoquer un fonctionnement indésirable.

REMARQUE : Cet appareil a été testé et s'est avéré conforme aux limites s'appliquant aux appareils numériques de classe B, conformément aux dispositions de la section 15 des normes de la FCC. Ces limites sont conçues pour offrir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre de l'énergie radiofréquence (RF). S'il n'est pas installé et utilisé conformément aux instructions, il peut provoquer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet appareil cause des interférences nuisant au fonctionnement d'un équipement radio ou d'un téléviseur (ce qui peut être déterminé en allumant, puis en éteignant l'appareil), nous vous encourageons à essayer de corriger l'interférence en mettant en œuvre une ou plusieurs des mesures suivantes :

- Réorienter l'antenne réceptrice ou la changer de place.
- Éloigner l'appareil du poste récepteur.
- Brancher l'appareil sur un circuit différent de celui sur lequel est branché le poste récepteur.
- Contacter le distributeur ou un technicien radio/TV.

- Réorienter l'antenne réceptrice ou la changer de place.
- Éloigner l'appareil du poste récepteur.
- Brancher l'appareil sur un circuit différent de celui sur lequel est branché le poste récepteur.
- Contacter le distributeur ou un technicien radio/TV.

DÉCLARATION DE LA COMMISSION FÉDÉRALE DE COMMUNICATIONS (FCC)
AVERTISSEMENT : Toute modification apportée à cet appareil sans l'approbation expresse de l'autorité compétente en matière de conformité peut résilier le droit de l'utilisateur d'utiliser l'appareil.
Cet appareil est conforme à la section 15 des normes de la FCC. Son fonctionnement est sujet à deux conditions : (1) Cet appareil ne doit pas causer d'interférences nuisibles et (2) cet appareil doit accepter les interférences reçues, y compris celles qui pourraient provoquer un fonctionnement indésirable.

moins le montant directement imputable à l'utilisation antérieure du produit par le consommateur. Pour obtenir une étiquette de retour, veuillez envoyer un courriel à feedback@babylisspro.com ou appeler notre service clientèle au **1-800-326-6247**.

Dès réception du produit, BaByliss Pro l'inspectera et, si la présente Garantie Limitée l'exige, tentera de le réparer, de le remplacer ou de le rembourser dans un délai de trente (30) jours. Toutefois, des retards indépendants de la volonté de BaByliss Pro peuvent survenir, auquel cas cette période peut être prolongée dans la mesure raisonnablement nécessaire.

IMPORTANT : Si la réparation est effectuée par un centre de service non autorisé par BaByliss Pro, veuillez demander au personnel du centre de service de prendre contact avec notre service à la clientèle, au **1-800-326-6247**, afin de s'assurer que l'appareil est toujours sous garantie, que le problème est correctement diagnostiqué et que les pièces de rechange adéquates sont utilisées.

RÉSIDENTS DE CALIFORNIE

La période de Garantie Limitée de DEUX (2) ans commence à la date de livraison du produit, qui peut être différente de la date d'achat du produit. Les résidents de Californie ont également la possibilité de bénéficier de cette Garantie Limitée en renvoyant le produit défectueux (A) au magasin où il a été acheté, ou (B) à un autre magasin qui vend des produits BaBylissPRO® du même type. Le magasin pourra, à son choix, réparer le produit, renvoyer le consommateur

DÉCLARATION DE CONFORMITÉ DU FOURNISSEUR

Marque : BaBylissPRO®

Modèle : FXT45FS

Description : Rasoir électrique

Partie responsable : Conair LLC

1 Cummings Point Road

Stamford, CT 06902

(203) 351-9000

Normes : Normes de la FCC, Section 15, sous-section B, ANSI C63.4-2014

Cet appareil est conforme à la section 15 des normes de la FCC. Son fonctionnement est sujet à deux conditions : (1) Cet appareil ne doit pas causer d'interférences nuisibles et (2) cet appareil doit accepter les interférences reçues, y compris celles qui pourraient provoquer un fonctionnement indésirable.

DATE DE PUBLICATION : 15/06/2026

DIRECTIVES D'ENTRETIEN

ENTRETIEN DE VOTRE RASOIR

Ne pas retirer la tête de rasage alors que l'appareil est allumé. Toujours éteindre l'appareil !

Afin d'éviter les risques de choc électrique, veiller à ce qu'aucun liquide ne pénètre à l'intérieur du boîtier.

Ne jamais appuyer sur les grilles ou les couteaux (lames internes), et ne pas les toucher avec des objets durs ; cela peut causer des dommages irréparables à l'appareil ou à ses pièces.

Prendre garde de ne pas toucher les couteaux (lames internes), car il est très aiguisé et peut provoquer des blessures !

Ne pas utiliser de détergents, produits abrasifs ou objets abrasifs pour nettoyer l'appareil ; cela peut causer des dommages irréparables.

REMARQUE : VÉRIFIER QUE L'APPAREIL EST ÉTEINT AVANT DE LE NETTOYER.

ATTENTION !


- Nettoyer le boîtier à l'aide d'un linge légèrement humide. NE PAS UTILISER DE DÉTERGENTS.
- Pour sécher, essuyer le boîtier avec un linge sec. Ne pas sécher le rasoir à l'aide d'un sèche-ventilateur ou autre appareil chauffant.
- Veiller à ce que le sélecteur de tension soit sur la bonne position avant de brancher l'appareil. Il se peut qu'un adaptateur de voyage (non inclus) soit nécessaire pour utiliser l'appareil à l'extérieur des É.-U. et du Canada. L'adaptateur

fourni s'adapte automatiquement à la tension du réseau électrique. **NE PAS UTILISER AVEC UN CONVERTISSEUR DE TENSION.**

REMARQUE : Toujours remplacer la tête de rasage et les couteaux (lames internes) en même temps.


REMPLACEMENT DE LA TÊTE DE RASAGE

- Tenir la tête de rasage par les côtés et tirer doucement vers le haut pour la retirer.
- Retirer la tête de rasage de rechange (modèle FXT45RF2) de son emballage. Aligner la tête de rasage avec les têtes d'entraînement, en veillant à aligner les flèches sur la tête de rasage et le boîtier. Le non-respect de cette consigne risque d'endommager le rasoir, les couteaux ou la tête de rasage.
- Installer prudemment la nouvelle tête de rasage sur le boîtier, en appuyant jusqu'à ce qu'elle s'enclenche. FAIRE ATTENTION DE NE PAS ABÎMER LES GRILLES OU LES COUTEAUX (LAMES INTERNES) PENDANT L'INSTALLATION.

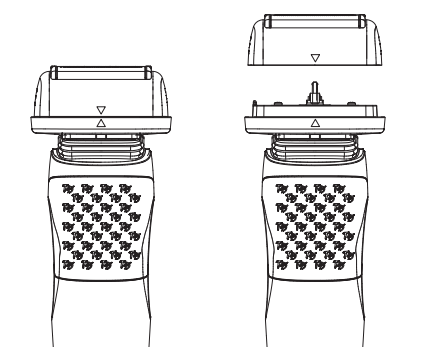


Entretien quotidien :

- Retirer le couvercle. Retirer la tête de rasage (Fig. 1 et 2).
- Nettoyer les grilles et les couteaux à l'aide de la brosse de nettoyage (Fig. 3).
- Remettre la tête de rasage en place (Fig. 4).

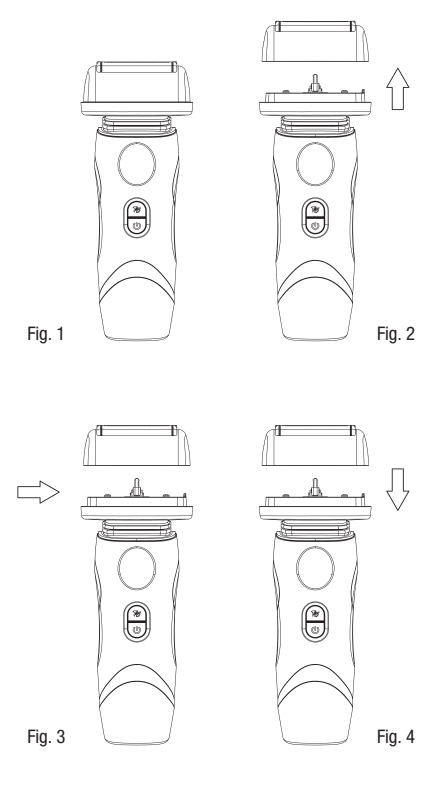

Entretien hebdomadaire :

- Suivre les étapes 1 à 3 de l'entretien quotidien.
- Rincer la tête de rasage sous l'eau du robinet (Fig. 5).

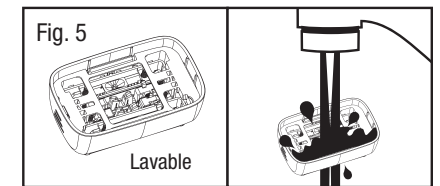

- Laisser la tête de rasage détachée pour qu'elle sèche.
- Remettre la tête de rasage en place, en appuyant jusqu'à ce qu'elle s'enclenche (Fig. 4).

Cette Garantie Limitée est émise par :
BaByliss Pro, une division de
Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-326-6247

SI VOUS NE RÉSIDEZ PAS AU CANADA, VEUILLEZ CONTACTER VOTRE DISTRIBUTEUR LOCAL.

GARANTIE DE REMPLACEMENT DE 2 ANS (VALABLE AU CANADA)

BaBylissPRO Canada est le distributeur exclusif de cet appareil au Canada. Nous offrons la garantie suivante sur cet appareil professionnel. Conservez votre reçu de caisse. C'est votre preuve d'achat et votre garantie. Cette garantie n'est pas valable si des personnes non autorisées ont fait un mauvais usage de l'appareil ou ont tenté de le modifier ou de le réparer. Merci de lire les conditions de garantie suivantes avant de nous retourner l'appareil défectueux.

Si votre appareil présente un défaut de fabrication dans les DEUX ANS suivant la date d'achat vous pouvez l'échanger sans frais, sous présentation d'une preuve d'achat.

Pour un service au titre de cette garantie retourner l'appareil défectueux au service à la clientèle de BaBylissPRO Canada accompagné de :

1) Votre reçu de caisse daté ;
2) Une description précise du problème/défaut ;
3) Votre adresse complète et votre numéro de téléphone (pendant la journée) ; et
4) Un mandat de 10 \$ CA pour couvrir les frais de port et de manutention

Envoyez retourner l'appareil défectueux à :
ATTN: BaBylissPRO Canada Service Center
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge, Ontario
L4H 0L2

Cette garantie s'applique uniquement aux résidents du Canada. Les produits expédiés depuis l'extérieur du Canada ne seront pas réparés et ne seront pas retournés à l'expéditeur.

Si vous avez des questions concernant ce produit, appelez le service à la clientèle de BaBylissPRO Canada au **1-800-363-0707** ou envoyez un courriel à customerservice@dannyc.com ou customer_service@babylisspro.ca.

BaBylissPRO®

Tomb 45



RASOIR À DOUBLE GRILLE À TÊTE PIVOTANTE ET À CHARGE SANS FIL

Directives d'utilisation FXT45FS

Afin que ce produit vous procure en toute sécurité beaucoup de satisfaction, lire attentivement le manuel d'utilisation avant de l'utiliser.